



## FUEL TANK CAP

### INSPECTION

#### 1. INSPECT FUEL TANK CAP ASSEMBLY

- (a) Visually check that the cap and gasket are not deformed or damaged.  
If the result is not as specified, replace the cap assembly or gasket.